

## 0. Overview of the parts.



- 1. Bow (2x)
- 2. M6 x 30 bolt + nuts (8x)
- 3. 3.5 x 9.5 screw + press stud (4x)
- 4. 4.8 x 18 screw + cylinder (4x)
- 5. Elastic (4x)
- 6. Tent

## Step 1. Assemble the bows



Put the bolts and nuts (2) in the bows (1) make sure the nuts are facing outwards.

## Step 2. Pre-assembly left panel



Mount the assembled bow in the box by pressing the bow together and snapping it in the four holes on the side of the box. Repeat this step for the other side.

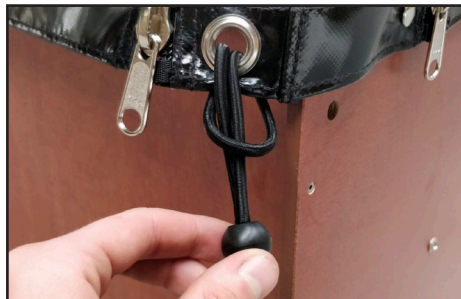
*Take note that: when you are mounting the tent on a narrow trike the tent uses two separate bows (1), the small bow needs to be placed in the front of the box.*

**Step 3. Put the tent over**

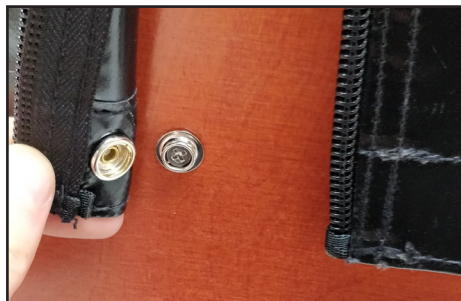
Put the tent (6) over the bows (1) and close the zippers of the tent. Make sure the notch in the tent is aligned with the steering tube.

**Step 5. Mount the cillinders**

Mount the cylinder (4) on the front and the back of the box with screws. Make sure there is enough tension on the elastics to keep the tent in the correct form.

**Step 4. Mount the elastics on the tent**

Mount the four elastics (5) on the tent.

**Step 6. Mount the press studs**

Align the press stud with the stud on the box and mark the position. Now mount the press stud with the included screws. Repeat this step for al four sides of the tent.